## ACO DRAIN

## Access for inspection and maintenance

Access units provide entry for inspection and maintenance through a removable access cover. Typically they are used above an in-line pit, at the start of the run and at the end of the run. Access units can also be used in long channel runs to provide additional access at 20 to 30 metre intervals. Access units have the same discreet drainage slot. A pair of grate removal tools is required to remove the cover from the access unit. Grate removal tool – Part No. 01318.

